

8Bitdo NES30 GamePad

Everything Old Is New Again



Instruction Manual
Name: 8Bitdo NES30 GamePad Model: NES30 8Bitdo Tech HK Ltd.

English

Thank you for buying the 8Bitdo NES30 GamePad! It's the best for fighting, shooting action and emulator games.

The NES30 GamePad supports many devices and platforms thanks to the multiple modes it can switch between. PC, Smart phone, iPad, Notebook, Android, iOS, Mac OSX, Windows are supported. Making the NES30 GamePad ideal for all popular systems and devices.

To relive the happy memories of the past.

8Bitdo

FAST STARTUP Power OFF: Hold down START for 3 seconds.

	Mode 1	Mode 2	Mode 3	Mode 4	Mode 5
	Joystick	Bluetooth Keyboard	iCade	Emu-Touch Screen	USB Joystick
Power ON (Hold down key for 3 seconds)					Auto connection
Blue LED					Can be ignored
Support system					
Memo	PC can use Bluetooth Adapter.	START+B+R power on. The 2nd Keyboard code.	Input method should be English.	Need ROOT	Also charge NES30 battery

The most common situations:
1. For Android devices, use Mode 1.
2. For iOS devices, use Mode 2 or 3.
3. For games that only support touchscreen controls, use Mode 4.

To turn Power OFF: Hold down START button for 3 seconds.
To activate the conditions below, you will need to clear the pair information on the NES30.
Press the SELECT button for more than 3 seconds to clear pair information. When both LED lights blink once you are able to connect other devices to the NES30 again.

1. Connect the NES30 GamePad to another device.
2. Change between Mode 1, 2 or 3.
3. Request password (to pair), if not "0000".

Note: Make sure the battery of the NES30 GamePad is not empty. Otherwise use the USB-cable to charge the device.

For two players: iOS/Mac OSX/Android/PC
Player 1 press START + B to power on the NES30 GamePad. (LED light will blink twice.)
Player 2 press START + B + R to power on the NES30 GamePad. (LED light will blink once, for a longer period of time.)
Both NES30 GamePads will provide a different key code password to work with Bluetooth. The mapping of the keys can be done in game.

Multiplayer mode(s):
Android/Windows: Connect the NES30 GamePad with the USB-cable or Bluetooth. Multiplayer support depends on the game itself.

Mode 1, 2 and 3

Manual in Detail:
(Note: Make sure the battery of the NES30 GamePad is not empty. Otherwise use the USB-cable to charge the device.)

Establishing Bluetooth connection with Mode 1, 2 or 3 activated:
Follow instructions on page Fast Startup Figure, to turn on the NES30 GamePad in mode 1, 2 or 3.

1. Scan for Bluetooth devices on your Android/iOS device.
2. Select "8Bitdo NES30 GamePad" in the list of available devices.
3. Map the keys in the app or emulator you will be playing.

Mode4 Emu-Touchscreen mode

Note: Android needs ROOT


1. Download the official 8Bitdo APP/APK from the official site at <http://www.8bitdo.com/Android-APP.html>
2. Follow the instructions on page Fast Startup Figure, to turn on the NES30 in mode 4.
3. Run the 8Bitdo app and scan for Bluetooth devices. When detected tap "8Bitdo NES30 GamePad" to pair.
4. If asked for pairing code (password), enter "0000".
5. In Emu-Touch screen mode, press SELECT+START to activate 8Bitdo APP.
6. Finally, drag and drop buttons in order to map the keys to your satisfaction. Press SELECT+START to finish set-up.



Download APP

Warning :


1. Android: After using Mode 4 and you wish to use Mode 1, 2 or 3, you will need to clear pairing information at system Bluetooth first and then scan, pair again.
2. iOS: After using Mode 4 and you wish to use Mode, 2 or 3, system Bluetooth is unavailable. Run NES30 GamePad app and turn Bluetooth settings of the app off (if off already, turn it on and then off again). Wait 10 seconds and system Bluetooth will be available again.

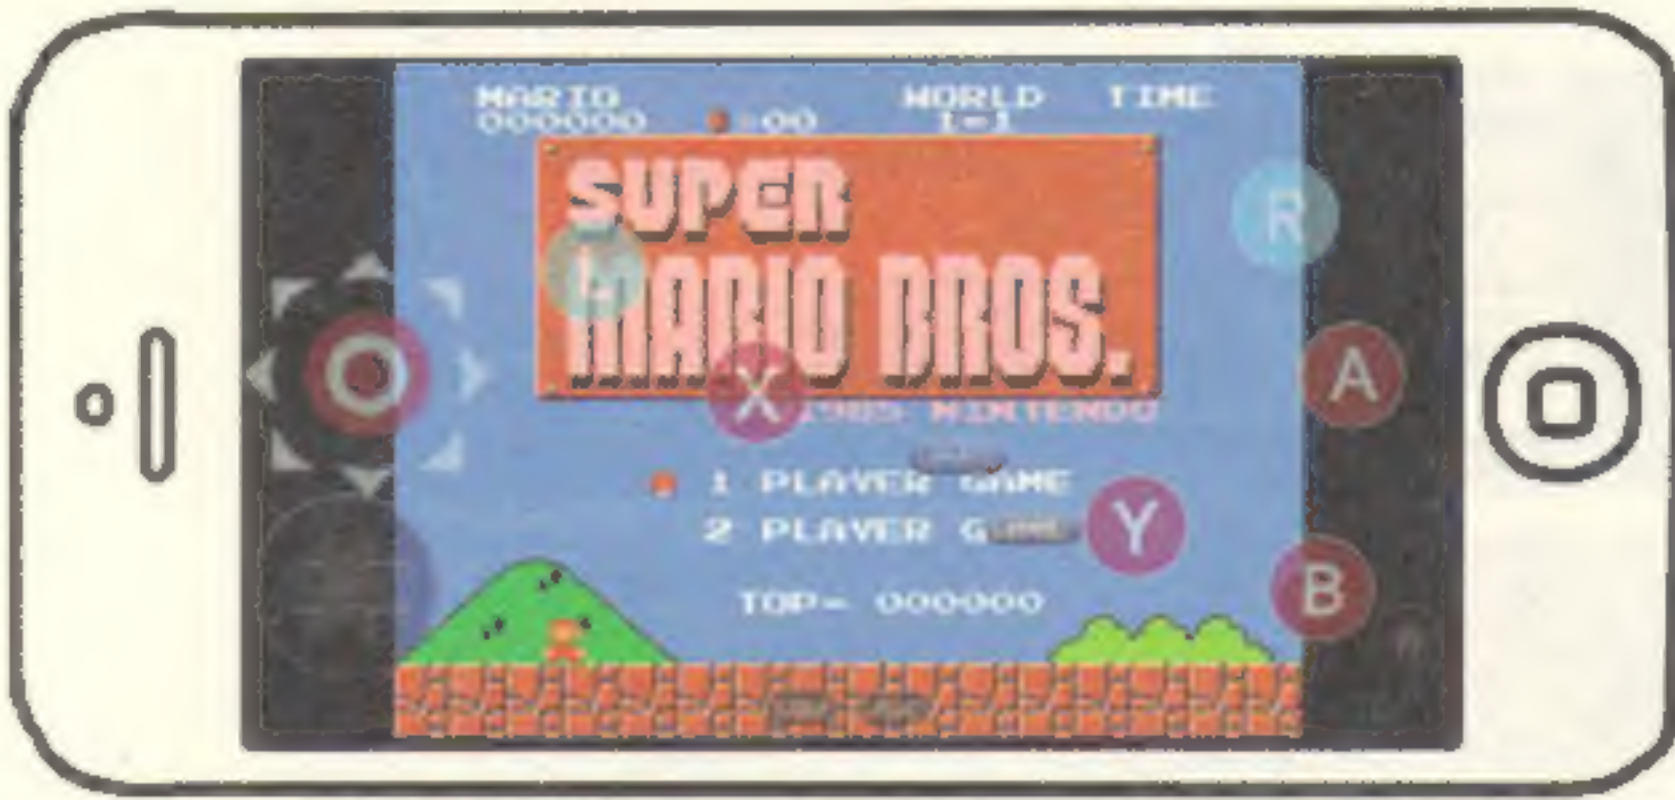

Tip: Double tap DPad or use two fingers can zoom it to fit games.

Mode5 Windows USB Cable Mode

1. Use the enclosed USB-cable to connect the NES30 GamePad to your PC. Your PC will immediately recognize the device.
2. You will be able to map the keys, in the game options of the game you are playing.

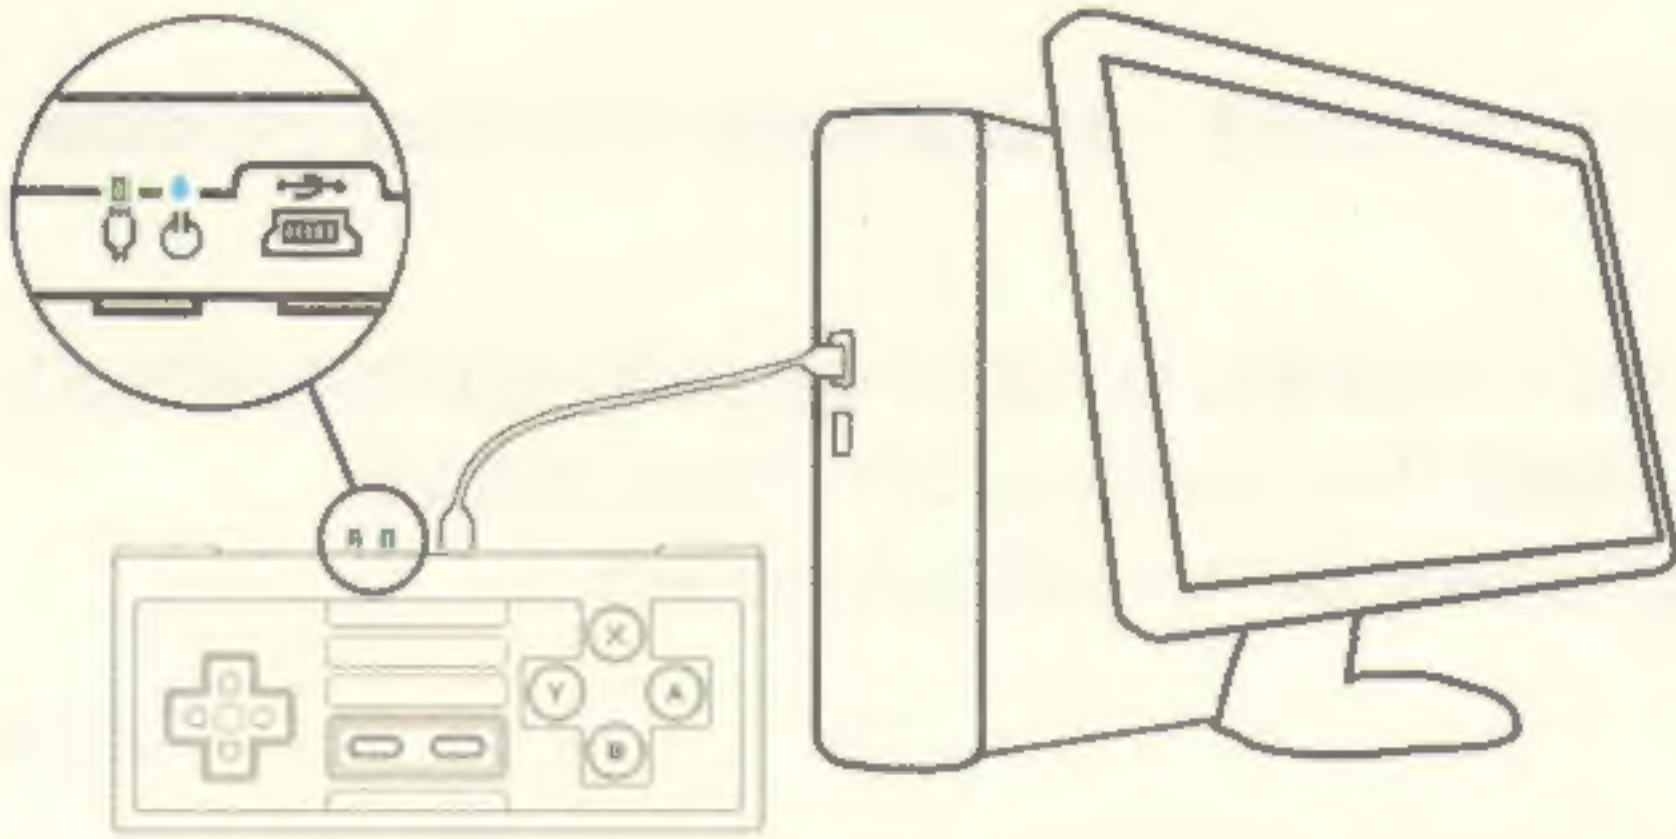

Note: When connecting the NES30 GamePad to your PC the battery will also charge.

Upgrade firmware via PC or Mac

1. Press START+L+R on the NES30 GamePad. Green + Blue LED lights will be blinking.
2. Use the enclosed USB-cable to connect the NES30 GamePad to your PC.
3. Download the NES30 GamePad upgrade software from the www.NES30.com and run the 8Bitdo_update.exe file in Windows folder (WIN) , or in MacOS folder (OSX) .
4. Select the Bluetooth_firmware.dat file and run the update.

LED Light(s) status

1. Blue light flashing: Bluetooth disconnected.
2. Solid Blue light: Bluetooth connected.
3. Green light flashing: Battery charging.
4. Green light off: Charging completed.
5. Solid Red light: Battery low.
6. No LED lights active: Power off or Sleep mode.

To restore the NES30 GamePad to factory settings hold down the START button for 8 seconds.

The firmware of the NES30 GamePad can be upgraded and functions may be changed or added. The final notices and features can be checked on the official website.

Disclosure: Second English version of manual revised by Joshy Scheers, Chief Editor of 3rd-strike.com.
Future versions, may or may not be revised by other translators and thus this data may or may not be accurate.

Specifications

input Power rating	DC5V,500mA
Battery type	Built-in rechargeable Lithium-Polymer battery
Battery capacity	480 mAh
Mass	Approx.210g (7.4 oz)

iPad and iPhone are trademark of Apple Inc.
Android™ is trademark of Google Inc.
Windows is trademark of Microsoft Inc.
All other trademarks are the property of their respective owners.
Any mention of Microsoft, Windows, Apple, iPad, iPhone, Google and Android is simply to indicate device compatibility and does not constitute an endorsement by any of the respective companies

